



DVD/CD PLAYER & VIDEO CASSETTE RECORDER



Owner's Manual

CONGRATULATIONS ON YOUR NEW PRODUCT!

Brand: FUNAI Model no.: DDVR-5505V

PLEASE KEEP THIS GUIDE IN A SAFE PLACE

Important information

Should any problems or defects occur in this product, please contact the vendor via the mail address below or by phone BEFORE contacting the shop where it was purchased.

Follow these three points to receive help from our technical specialists:

1. Before calling, please read this user guide thoroughly.
2. Check our website at www.dangaard-electronics.com, where FAQ, various drivers, manuals, software etc are available for free download.
3. Before calling, please have valid proof of purchase, model type, serial number and a precise description of the problem ready!

Service Hotline Mail: service@dangaard-el.com

**Service Hotline Telephone: Denmark: +45 7230 3535
Germany: +49 180 5 777 4475**

*** Telephone opening hours are Monday-Friday from 09.00-15.00**

If we are unable to solve the problem via the Hotline and the product has to be returned to the dealer, please note that the product, its original packaging, any accessories and proof of purchase must be handed to the dealer before the product can be accepted for repair handling.

Precautions

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

LASER SAFETY


This unit employs a laser. Only a qualified service person should remove the cover or attempt to service this device, due to possible eye injury.

CAUTION: USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

CAUTION: VISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED. AVOID EXPOSURE TO BEAM.

LOCATION:

- PRINTED ON THE BACK

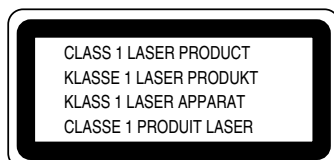

IMPORTANT

- Use only discs marked DVD or disc with this DVD.
- Use only cassettes with the VHS mark with this VCR.

POWER SUPPLY

The main power supply is engaged when the main plug is plugged in a 220-240V, 50Hz AC outlet. To operate the unit, press **FUNCTION** to turn on the unit.

**WARNING: LIVE PARTS INSIDE.
DO NOT REMOVE ANY SCREWS.**

DEW WARNING

Moisture condensation may occur inside the unit when it is moved from a cold place to a warm place, or after heating a cold room or under conditions of high humidity. Do not use the DVD/VCR at least for 2 hours until its inside is dry.

CAUTION

- 1) Do not attempt to open the cabinet. There are no parts you can service inside. Refer all servicing to qualified service personnel.
- 2) Slots and openings in the cabinet and the sides or bottom are provided for ventilation. To ensure reliable operation and to protect the unit from overheating, these openings must not be blocked or covered.
Avoid installation in enclosed spaces such as bookcases unless proper ventilation is provided.
- 3) Keep the unit away from radiators and other heat sources.
- 4) Avoid use near strong magnetic fields.
- 5) Do not push objects of any kind into the DVD/VCR through the cabinet slots or openings as they could touch electrically live parts or short circuit parts resulting in a fire or electric shock.
- 6) Never spill liquid on this unit. If liquid is spilled and penetrates into the unit, consult qualified service personnel.
- 7) Use this unit in a horizontal (flat) position only.
- 8) Before attempting to operate the unit, make sure that the timer recording mode is "OFF".
- 9) This product is in Stand-by mode when it turns off while the power cord is connected.
- 10) Do not place any combustible objects on the device (candles, etc.).

Positioning

- Do not place the DVD/VCR directly on top of, or underneath, your TV set. Ensure that there is at least 20 cm between the DVD/VCR and the TV set, and that air can circulate freely through the ventilation openings of the DVD/VCR.

A Note About Recycling

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with your local recycling regulations.
Batteries should never be thrown away or incinerated but disposed of in accordance with your local regulations concerning chemical wastes.

Table of Contents

Precautions	2	Timer Recording.....	15
LASER SAFETY	2	Auto Return	16
IMPORTANT.....	2	Quick-Find	16
POWER SUPPLY	2	Index Search	16
DEW WARNING	2	Time Search	16
CAUTION	2	Copying a Video Tape.....	17
Positioning	2	Status Display	17
A Note About Recycling	2	DVD Operation	18
Playable Discs	4	Basic Playback.....	18
Unplayable Discs	4	Disc Menus	18
Important Copyright Information	4	Title Menu	18
Symbols Used in this Manual.....	4	Calling up a Menu Screen During Playback.....	18
Functional Overview	5	About the PBC Function of Video CD	18
Front Panel	5	MP3 Playback	19
Remote Control.....	6	Resume.....	19
Loading Batteries	6	Pause	19
VCR/DVD Switching	6	Step by Step Playback	19
Rear View	7	Fast Forward / Reverse Search	19
Setting up Your DVD/VCR	7	Slow Forward / Reverse	19
Before Connecting	7	Zoom	19
Connecting to a TV	7	Audio Language	20
For Better Sound (for DVD Features)	8	Subtitle Language	20
External Input Mode (for VCR Features)	9	Camera Angle	20
Video Cassette Tape	9	Stereo Sound Mode	20
TV Colour System	9	Virtual Surround	20
Turning on Your DVD/VCR	9	Track Search	20
Changing the Language	9	Title / Chapter Search	21
Video Channel Setting	9	Time Search	21
Setting the Clock	10	Marker Setup.....	21
Channel Presetting	10	Repeat.....	21
Automatic Channel Preset	10	Programmed Playback.....	22
Manual Channel Preset	11	Random Playback	22
To Skip a Preset Channel	11	On-Screen Information.....	22
Channel Reprogramming	11	DVD Setup	23
VCR Operation	12	Language Setting	23
VCR Features	12	Audio Setting	23
Playback	12	Display Setting	23
Recording.....	13	Parental Control	24
OTR (One Touch Recording).....	14	To Reset All the Settings of the SET UP screen	24
Auto Repeat Playback	14	Troubleshooting Guide	26
Picture Select.....	14	Specifications	27
Automatic Operations	14	Maintenance	27
Real Time Tape Counter.....	15	Declaration of Conformity	Back Cover

Supplied Accessories

- Remote control
- Two R6 (AA) batteries
- RF cable
- Scart cable
- Owner's Manual

Model/Serial Number

This appliance has a serial number located on the rear panel. Please note down the serial number and retain the information for your records.

Model number: DDVR-5505V

Serial number: _____

Playable Discs

The following discs can be played back on this unit.

- DVD video with region code 2 or ALL (*1, 2, 5, 7)



- DVD+R/RW (*1, 3, 4, 5, 6, 7)



- DVD-R/RW (*1, 3, 4, 5, 6, 7)



- Audio CD (*5, 7)



- CD-R/RW with MP3 files (*5, 6, 7)



MP3

- Video CD (*1, 5, 7)



- DTS-CD (*5, 7)

Note:

*1: This unit conforms to the PAL colour system. Also you can play discs recorded with the NTSC system via a PAL system TV set.

*2: The region code 2 or ALL are marked on DVDs as follows.



*3: Certain DVD-Video discs do not operate as described in this manual due to the intentions of the disc's producers.

*4: Only the discs recorded in the video format and finalized can be played back.

Depending on the recording status of a disc, the disc may not be played back at all or normally (the picture or sound may not be smooth, etc.).

*5: Scratched or stained discs may not be played back.

*6: Some discs cannot be played back because of incompatible recording conditions, characteristics of the recorder or special properties of discs.

*7: You can play back discs which bear marks above. If you use nonstandardized discs, this unit may not play them back. Even if they are played back, the sound or video quality will be compromised.

Unplayable Discs

- On the following discs, only the sound can be heard (picture cannot be viewed).**

CDV
CD-G

- NEVER play back the following discs. Otherwise, malfunction may result!**

DVD-RAM
CD-I
Photo CD
DVD with region codes other than 2 or ALL
DVD-ROM for personal computers
CD-ROM for personal computers

- On the following disc, the sound MAY NOT be heard.**

Super Audio CD

Note : Only the sound recorded on the normal CD layer can be delivered.

The sound recorded on the high density Super Audio CD layer cannot be delivered.

- Any other discs without compatibility indications.

Important Copyright Information

DVD:

Unauthorized copying, broadcasting, public performance and lending of discs are prohibited.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

VCR:

Unauthorized recording or use of broadcast television programming, video tape, film or other copyrighted material may violate applicable copyright laws. We do not take responsibility for the unauthorized duplication, use, or other acts which infringe upon the rights of copyright owners.

Symbols Used in this Manual

The following symbols appear below in some headings and notes in this manual, with the following meanings!

DVD-V

: Description refers to playback of DVD video discs.

CD

: Description refers to playback of Audio CDs.

MP3

: Description refers to playback of MP3 discs.

VCD


: Description refers to playback of Video CDs.

QUICK

: Description refers to the items to be set in the QUICK mode.


Functional Overview

Front Panel

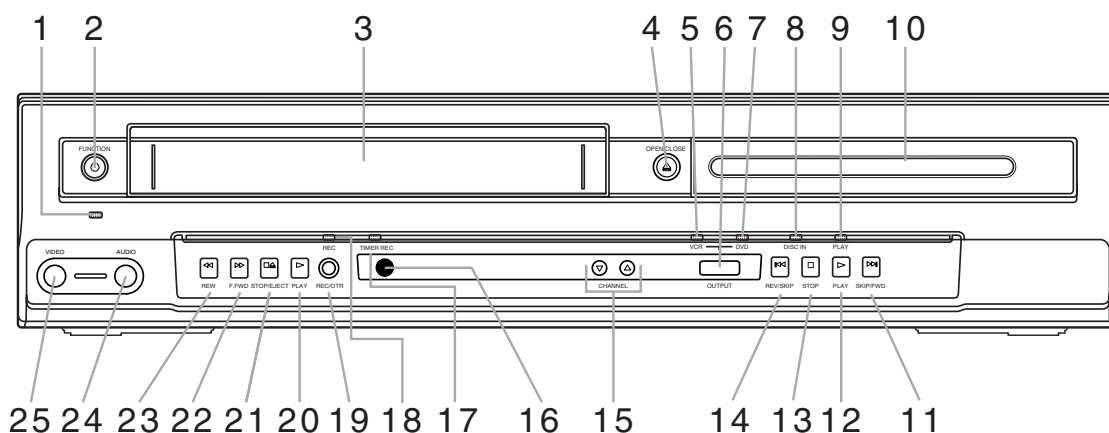

- 1. FUNCTION indicator**
The indicator is on when this unit is turned on.
- 2. FUNCTION**
To turn the unit ON or OFF.
- 3. Cassette Compartment**
- 4. OPEN/CLOSE (DVD)**
To open or close the disc tray.
- 5. VCR OUTPUT indicator (Green)**
The indicator is on when this unit is in the VCR mode. Make sure that this indicator is on before VCR operation.
- 6. OUTPUT**
To select the DVD mode or VCR mode.
- 7. DVD OUTPUT indicator (Green)**
The indicator is on when this unit is in the DVD mode. Make sure that this indicator is on before using the DVD player.
- 8. DISC IN indicator**
Lights up when a disc is inserted.
- 9. PLAY indicator**
Lights up when the inserted disc is being played back.
- 10. Disc tray**
- 11. SKIP/FWD (DVD)**
To go to the next chapter or track during playback. Press and hold this button for 1.5 seconds or more to search forward through the disc.
- 12. PLAY (DVD)**
To begin disc playback.
- 13. STOP (DVD)**
To stop playback.
- 14. REV/SKIP (DVD)**
To go to the previous chapters or tracks during playback. Press and hold this button for 1.5 seconds or more to search backward through the disc.
- 15. CHANNEL (VCR)**
To change TV channels.
To adjust the tracking manually during playback.
- 16. Remote Sensor**
- 17. TIMER REC indicator**
Lights up when the timer recording or an OTR recording has been set.
- 18. REC indicator**
Lights up during a recording. Flashes when a recording is paused.
- 19. REC/OTR (VCR)**
Press once to start recording or repeatedly to start One-Touch Recording.
- 20. PLAY (VCR)**
To begin tape playback.
- 21. STOP/EJECT (VCR)**
To stop playback.
To eject the tape in the Stop mode.
- 22. F.FWD (VCR)**
To fast forward the tape.
- 23. REW (VCR)**
To rewind the tape.
- 24. AUDIO in jack**
Connect an audio cable coming from the audio out jack of a camcorder, another VCR, or an audio source here.
- 25. VIDEO in jack**
Connect a cable coming from the video out jack of a camcorder, another VCR, or an audio-visual source (laser disc player, video disc player, etc.) here.

Remote Control

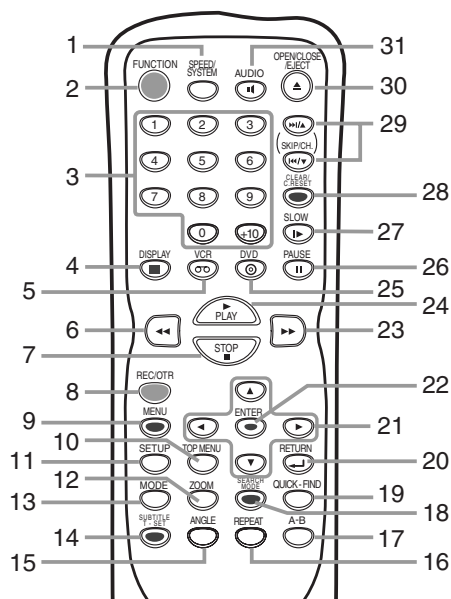


1. **SPEED/SYSTEM (VCR)**
To change the recording speed.
To change the VCR system for marching recorded system. (PAL or MESECAM)
2. **FUNCTION**
To turn the unit ON or OFF.
3. **0-9 number buttons**
To select numbered items on the menu screen. /
To select chapters, titles or tracks directly. (DVD)
To select a channel. (VCR)
4. **DISPLAY**
To display the current playback mode. (DVD)
To display the current time, tape counter and channel number. (VCR)
5. **VCR**
Press this button before using the remote control for VCR features.
6. **◀◀**
To search backward through the disc. (DVD)
To rewind the tape. (VCR)
7. **STOP**
To stop playback. (DVD)
To stop playback or recording. (VCR)
8. **REC/OTR (VCR)**
Press once to start recording or repeatedly to start One-Touch Recording.
9. **MENU**
To call up the main menu on a DVD. /
To call up the MP3 menu. (DVD)
To call up the VCR menu. (VCR)
10. **TOP MENU (DVD)**
To call up the title menu on a DVD.

Loading Batteries

- 1) Open the battery compartment cover.
- 2) Insert two R6 (AA) batteries, with each one oriented correctly.
- 3) Close the cover.

Note:

 - Do not mix alkaline and manganese batteries.
- Do not mix old and new batteries.



11. **SETUP (DVD)**
To access or remove the DVD setup menu.
12. **ZOOM (DVD)**
To magnify the part of picture.
13. **MODE (DVD)**
To set up programmed or random playback for Audio CDs and MP3 files.
To set the Virtual Surround ON or OFF.
14. **SUBTITLE (DVD)**
To change subtitles on a DVD.
15. **ANGLE (DVD)**
To change camera angles on a DVD.
16. **REPEAT (DVD)**
To play the selected chapter, title, track, group or a whole disc repeatedly.
17. **A-B (DVD)**
To repeat between your chosen point A and B.
18. **SEARCH MODE**
To search chapters, titles, tracks, markers or time. (DVD)
To call up the index or time search menu. (VCR)
19. **QUICK-FIND (VCR)**
To skip to the beginning of next programme.
20. **RETURN (DVD)**
To return to the previous menu.
21. **Arrow (◀/▶/▲/▼)**
To move the cursor.
22. **ENTER (DVD)**
To confirm your menu selections.
23. **▶▶**
To search forward through the disc. (DVD)
To fast forward the tape. (VCR)
24. **PLAY**
To begin playback.
25. **DVD**
Press this button before using the remote control for DVD features.
26. **PAUSE**
To pause playback. /
To advance playback one frame at a time. (DVD)
To pause playback or recording. / To advance playback one frame at a time. (VCR)
27. **SLOW (VCR)**
To view the tape in slow motion.
28. **CLEAR (DVD)**
To clear the markers. / To clear the incorrect input.
29. **C.RESET (VCR)**
To reset the tape counter.
30. **SKIP |◀◀▶▶| (DVD)**
To skip chapters or tracks.
31. **CH. ▲/▼ (VCR)**
To change TV channels. / To adjust the tracking manually during playback.
30. **OPEN/CLOSE (DVD)**
To open or close the disc tray.
- EJECT (VCR)**
To eject the tape from the VCR.
31. **AUDIO (DVD)**
To change audio languages on a DVD. / To change sound modes of a CD.

VCR/DVD Switching

Note: Since this product comprises VCR and DVD players, it is necessary to select the correct output mode.

SWITCHING TO VCR MODE


Press **VCR** on the remote control or **OUTPUT** on the front panel. (Make sure that the VCR OUTPUT indicator is lit.)

SWITCHING TO DVD MODE

Press **DVD** on the remote control or **OUTPUT** on the front panel. (Make sure that the DVD OUTPUT indicator is lit.)

Note: Pressing only **OUTPUT** on the front panel does not switch the mode of the remote control. To change the mode of the remote control, press **VCR** or **DVD** on the remote control.

Rear View

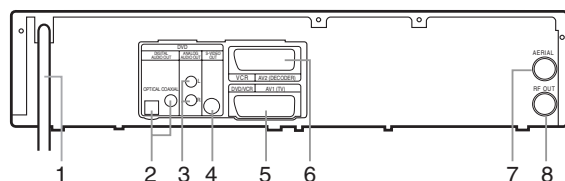

1. Power Cord

Connect to a standard AC outlet

2. DIGITAL AUDIO OUT (OPTICAL, COAXIAL) jacks (DVD only)

Connect to an amplifier with digital input jacks such as Dolby Digital decoder, DTS decoder, etc.. Use a commercially available optical or coaxial cable.

3. ANALOG AUDIO OUT jacks (DVD only)

Connect to the audio input jacks of your TV or stereo system. Use commercially available audio cables.

4. S-VIDEO OUT jack (DVD only)

Connect to the S-VIDEO input jack on your TV. Use a commercially available S-VIDEO cable.

5. AV1 (TV) jack

Connect to the scart jack on your TV. Use the supplied scart cable.

6. AV2 (DECODER) jack (VCR only)

Connect a scart cable from another VCR, camcorder, or an audio/video source.

7. AERIAL jack

Connect to an antenna or cable.

8. RF OUT jack

Connect to the antenna in jack of your TV, cable box or direct broadcast system. Use the supplied RF cable.

CAUTION: Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the unit.

Setting up Your DVD/VCR

Before Connecting

- Please refer to the instruction books of your TV, DVD/VCR, Stereo System or other devices as necessary to make the best connections.
- Make one of the following connections, depending on the capabilities of your existing equipment.

The following guidelines are options for the best picture and sound quality available on your DVD/VCR.

Picture

- 1) Use SCART Output (DVD/VCR(AV1 TV)) for best picture quality (for DVD and VCR features).
- 2) Use S-Video Output for the better picture quality (for DVD features only).
- 3) If your TV only has a RF-style (Antenna IN or 75 ohm) input, use the RF OUT for connection and set your TV to channel 22 ~ 69 with the same channel for DVD/VCR is set (for DVD and VCR features).

Note: • When your TV conforms to RGB input signal, the Euro AV (scart) connection ensures you the best picture and audio quality. However if your TV does not conform to RGB input signal, the S-VIDEO OUT and ANALOG AUDIO OUT connection is better (for DVD features only).

Sound

- 1) Use SCART Output (DVD/VCR(AV1 TV)) for best sound quality (for DVD and VCR features).
- 2) Digital audio connections provide the clearest sound. Connect the DVD/VCR's DIGITAL AUDIO OUT (either COAXIAL or OPTICAL) to your amplifier or receiver (for DVD features only).
- 3) If digital connections are not possible, connect the DVD/VCR's ANALOG AUDIO OUT(Left and Right) to your amplifier, receiver, stereo or TV (for DVD features only).

WARNING!


- Never make or change connections with the power switched on.
- Connect the DVD/VCR directly to your TV, instead of eg. a VCR, to avoid distortion because DVD video discs are copy protected.

- Do not connect the ANALOG AUDIO OUT of DVD/VCR to PHONO IN of your amplifier or receiver.
- If you use the scart cable, it is not necessary to connect the analog audio cables.

Connecting to a TV

- 1) Disconnect the antenna or cable from your TV.
- 2) Connect that antenna or cable to the AERIAL jack of this unit.
- 3) Connect the RF OUT jack of this unit to the antenna in jack of your TV. Use the supplied RF cable.
- 4) Connect the AV1 (TV) scart jack of this unit to the scart input jack of your TV. Use the supplied scart cable.
- 5) Plug in the TV and this unit.


Note: • The TV must be connected to this unit through AV1 (TV) jack. A connection to AV2 (DECODER) jack will not function correctly.

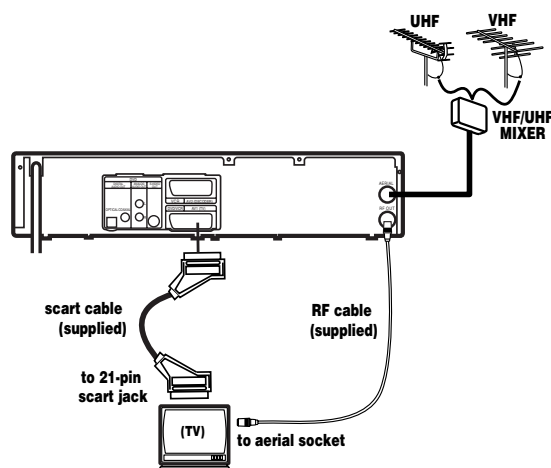

If your TV has no scart input jack but has an S-VIDEO input jack,

- 1) Follow the steps 1) to 3) above.
- 2) Connect the S-VIDEO OUT jack on this unit to the S-VIDEO input jack on your TV.
- 3) Connect the analog AUDIO OUT jacks of this unit to the analog audio input jacks of your TV.
- 4) Plug in the TV and this unit.

Note: The S-VIDEO connection only supplies video (picture) in the DVD mode. Therefore, video channel setting is necessary for watching videotapes. For more details, refer to page 9.

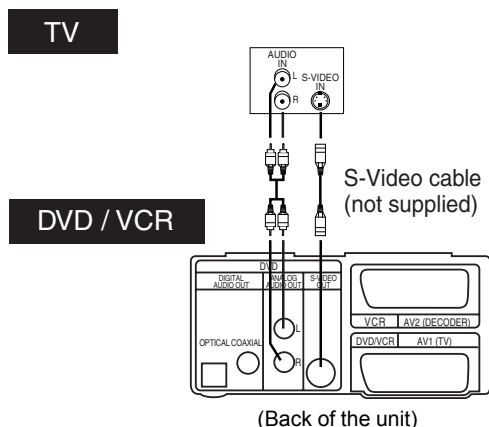


If your TV has no VIDEO input jacks,

- 1) Follow the steps 1) to 3) and 5) right under "Connecting to a TV."
- 2) Video channel setting is necessary. Refer to page 9.

For Better Sound (for DVD Features)

These 2 connections are optional for better sound.

- 1) For clear digital sound quality, use the DIGITAL AUDIO OUT (either OPTICAL or COAXIAL) jack for the connection to your digital audio system.
 - If the audio format of the digital output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all.

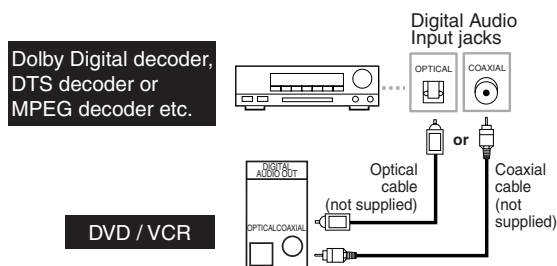


Hints for connecting to a Dolby Digital decoder, DTS decoder or MPEG decoder

- By connecting this unit to a Multi-channel Dolby Digital decoder, you can enjoy high-quality 5.1ch Dolby Digital surround sound as heard in the movie theaters.
- When this unit is connected to a DTS decoder, you can enjoy 5.1 channel surround system which reproduces the original sound as truthfully as possible. 5.1 channel surround system is developed by the Digital Theater System, Inc.
- A digital component with a built-in MPEG 2, Dolby Digital™ or DTS decoder allows you to enjoy the surround sound while producing the effecting of being in a movie theater or a concert hall.
- If output is Dolby Digital encoded audio, connect to a Dolby Digital decoder, and set "DOLBY DIGITAL" to "ON" in the AUDIO menu. (Refer to page 23.)
- If output is DTS encoded audio, connect to a DTS decoder, and set "DTS" to "ON" in the AUDIO menu. (Refer to page 23.)
- If output is MPEG encoded audio, connect to a MPEG decoder, and set "MPEG" to "ON" in the AUDIO menu. (Refer to page 23.)

Hints for connecting to an MD deck or DAT deck

- The audio source on a disc in a Dolby Digital 5.1 channel surround format cannot be recorded as digital sound by an MD or DAT deck.
- Unless connected to a Dolby Digital decoder, set "DOLBY DIGITAL" to "OFF" in the AUDIO menu. Playing a DVD using incorrect settings may generate noise distortion, and damage the speakers. (Refer to page 23.)
- Set "DOLBY DIGITAL", "DTS", and "MPEG" to "OFF" in the AUDIO menu for connecting to an MD deck or DAT deck. (Refer to page 23.)

- 2) For dynamic sound effects, use the ANALOG AUDIO OUT jacks for the connection to your audio system.

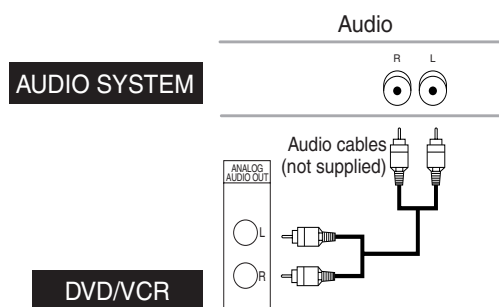

"DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

External Input Mode (for VCR Features)

Connect an external device (a decoder, a camcorder, etc.) to the AV2 (DECODER) jack. Press **0, 0, 2**, with the **number buttons**, so that "AV2" appears on the TV screen.

 
If you use the front AUDIO/VIDEO input jacks, press **0, 0, 3**, with the **number buttons**, so that "AV3" appears on the TV screen.

If you use the AV1 (TV) jack for connecting a device, press **0, 0, 1** with the **number buttons**, so that "AV1" appears on the TV screen.

Video Cassette Tape

This DVD/VCR will operate with any cassette that bears the VHS mark. For best results, we recommend the use of high-quality tapes. Do not use poor quality or damaged tapes.

- You can prevent accidental erasing of a recording by breaking off the erase-prevention tab on the back edge of the cassette.



- If you decide to record on the tape again, cover the hole with plastic tape.

TV Colour System

Different countries use different television colour systems. Tapes recorded in the PAL, MESECAM or NTSC system can be played back on this unit. Usually, the picture on the TV screen will be in black and white when you play back a tape that is recorded in a different colour system.

Tapes recorded in the NTSC system can be played back on this unit and a PAL system TV set. This feature is only available in the SP mode. When playing back such tapes, the picture may roll up or down, shrink vertically and black bars may appear both at the top and bottom of the screen. Adjust the vertical hold control on your TV, if the TV features this control.

Turning on Your DVD/VCR

The following steps should only be performed if there is a power failure or if this unit is unplugged for more than 30 seconds.


- Use the remote control for this procedure.
- Turn on the TV and select the video channel on the TV.
 - Press **FUNCTION**, then **VCR**.
 - Press **▲** or **▼** repeatedly to select your desired language.
 - Press **MENU**.

LANGUAGE
► [ENGLISH]
DEUTSCH
TSCHECHISCH
POLSKI
MAGYAR
РУССКИЙ

Changing the Language

If you want to change the language used on the TV screen menus, follow the steps below.


- Use the remote control for this procedure.
- Press **VCR**, then **MENU**.
 - Press **▲** or **▼** to select "INITIAL", then press **►**.
 - Press **▲** or **▼** to select "LANGUAGE", then press **►**.
 - Press **▲** or **▼** repeatedly to select your desired language.
 - Press **MENU**.

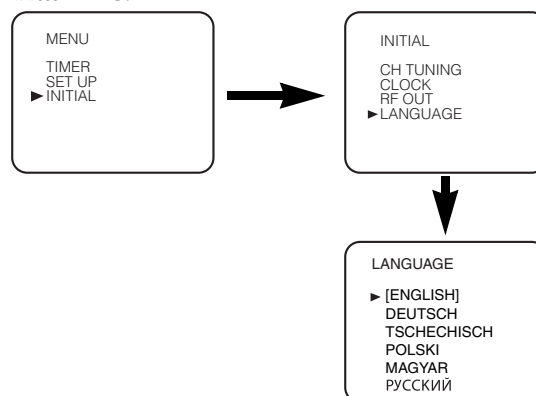

Video Channel Setting

Video channel setting will be necessary, if your DVD/VCR is connected to the TV via the RF cable.

- Use the remote control for this procedure.
- Press **VCR**.
 - Insert a pre-recorded tape into the DVD/VCR. The DVD/VCR will start playback automatically. If playback does not start, press **PLAY**.
 - Select and adjust your TV to channel 36.
 - If the playback picture appears on the TV screen, continue with step 10).
 - If channel 36 is set for broadcasting, or interference lines appear on the picture, the RF converter must be set to a different channel between CH22 and CH69. Continue with step 4).
 - Press **MENU**.
 - Press **▲** or **▼** repeatedly to select to "INITIAL". Then, press **►**.
 - Press **▲** or **▼** repeatedly to select to "RF OUT". Then, press **►**. The RF OUT CH menu will appear.
 - Press **▲** or **▼** to select a channel which is not used for broadcasted between channel 22 and channel 69 in your area, then press **►**.
 - Press **SPEED/SYSTEM** to select your desired system (G or K).
 - Press **MENU** to exit. Set the TV channel to the RF OUT CHANNEL which was selected on the DVD/VCR. A picture from the DVD/VCR will appear on the TV screen. If a picture does not appear, repeat steps 4) to 9) using a different channel which is not used for broadcasting.
 - Press **STOP** to stop the tape.
- Note:**
- You may also access the RF OUT CH menu by pressing and holding **MENU** on the remote control for 3 seconds during power off until the RF OUT CH menu appears.
 - If this unit and your TV are connected using a scart cable, the RF converter may be switched off to avoid any possibility of interference. To switch off the RF converter, follow steps 1) and 4) to 6) above and press **▼** repeatedly until "- -" appears next to "RF OUT CH." Press **►**, then **MENU** to exit.

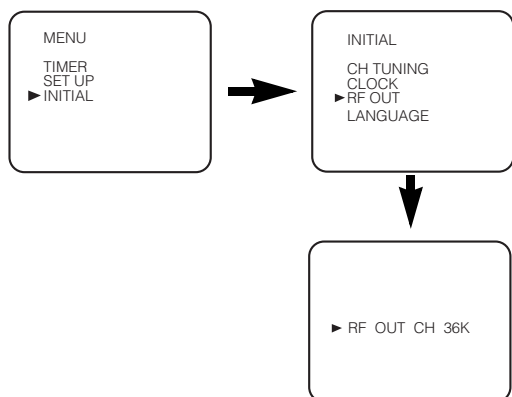

Setting the Clock


This unit incorporates a 24-hour clock. The clock must be set for the Timer Recording function to operate correctly.

- Use the remote control for this procedure.

- 1) Press **VCR**, then **MENU**.
- 2) Press **▲** or **▼** to select "INITIAL", then press **▶**.
- 3) Press **▲** or **▼** to select "CLOCK", then press **▶**.
- 4) Press **▲** or **▼** until the relevant year appears, then press **▶**.
- 5) Press **▲** or **▼** until the relevant month appears, then press **▶**.
- 6) Press **▲** or **▼** until the relevant day appears, then press **▶**.
- 7) Press **▲** or **▼** until the relevant hour appears, then press **▶**.
- 8) Press **▲** or **▼** until the relevant minute appears.
- 9) Press **MENU** to start the clock.

Note:

- Press **◀** to go one step back from the current step during steps 5) to 8).
- Although seconds are not displayed, they begin counting from 00 when you exit by pressing **MENU**. Use this feature to synchronize the clock with the correct time.
- If this unit is unplugged or if there is a power failure for more than 30 seconds, you may have to reset the clock.

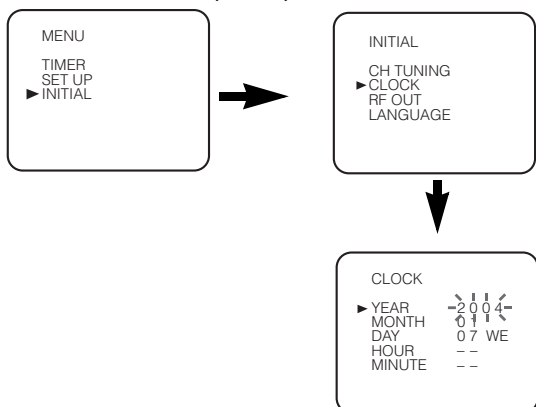

Channel Presetting

Tuning of broadcast channels not already preset in the DVD/VCR can be performed in two ways.

Automatic Channel Preset

- By "AUTOMATICALLY" tuning channels and placing them in sequential order in the DVD/VCR's memory i.e. the first channel found will be memorized into the DVD/VCR's channel position 1, the second channel found will be memorized into the DVD/VCR's channel position 2 and so on.
- Execution of the "Automatic" channel presetting cancels all the preset channels. DO NOT use this feature if you intend to use some of the pre-tuned channels. Use the "Manual" channel presetting function to tune in the additional channels you require.

Manual Channel Preset

- Each channel is tuned manually and individually. Follow the steps laid out in the "Manual Channel Preset".

Before you preset Channel...


- It is necessary to set the video channel if this unit is connected to the TV via the RF cable, and TV channel 36 is set for broadcasting, or interference lines appear on the picture. Please refer to "Video Channel Setting".

Automatic Channel Preset

You can programme the tuner to scan only the channels that you can receive in your area.

- Use the remote control for this procedure.

- 1) Turn on the TV and select the TV channel to the video channel on the TV.
 - 2) Press **VCR**, then **MENU**.
 - 3) Press **▲** or **▼** to select "INITIAL", then press **▶**.
 - 4) Press **▲** or **▼** to select "CH TUNING", then press **▶**.
 - 5) Press **▲** or **▼** to select "AUTO", then press **▶**.
- The tuner scans and memorizes all the active channels in your area. After scanning, the tuner stops on the lowest memorized channel.

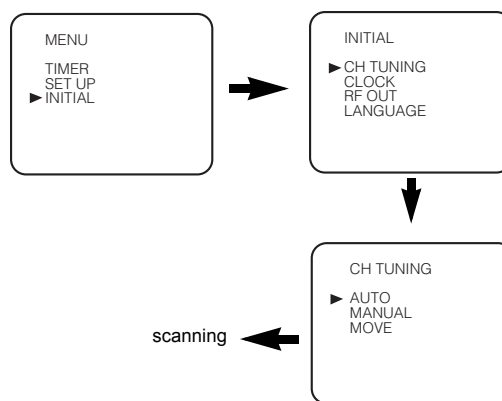

To Select a Desired Channel

You can select a desired channel by using **CH**. (**▲/▼**), or directly pressing the **number buttons** on the remote control.

- Enter a channel numbers as a two-digit number for the quickest results. For example, to select channel 6, press **0** and **6**. If you only press **6**, channel 6 will be selected after a brief delay.
- You can only select channels 1-99.

Manual Channel Preset

- Use the remote control for this procedure.


- Press **VCR**, then **MENU**.
- Press **▲** or **▼** to select "INITIAL", then press **►**.
- Press **▲** or **▼** to select "CH TUNING", then press **►**.
- Press **▲** or **▼** to select "MANUAL", then press **►**.
- Press **▲** or **▼** to select "POSITION", then press **►**.
 - When a weak signal is received in Manual Tuning mode, you can change the background to solid blue or the static screen by pressing **C.RESET**.
- Press the **number buttons**, **▲** or **▼** to select your desired position number, then press **►**.
 - You can select position number 01-99.
 - If [ON] appears on the right side of "SKIP", press **▲** or **▼** to point to "SKIP". Then, press **►** to select [OFF].
 - If you want to remove scrambled signals, press **▲** or **▼** repeatedly to point to "DECODER". Then, press **►** to select [ON].
 - If you want to change the video mode, press **▲** or **▼** repeatedly to point to "VIDEO MODE". Then, press **►** to select your desired mode.
- Press **▲** or **▼** to select "CHANNEL", then press **►**. Press **▲** or **▼**. The DVD/VCR tuner will begin to search up or down automatically. When a channel is found, the DVD/VCR will stop searching and the picture will appear on the TV Screen.
 - You can select desired channel number by using the **number buttons**. You must refer to the following Channel Plan table and press three digits to select the channel number.
(To select channel 24, press "0" button first and then press "2" and "4".)
 - If this is the channel you want, press **►**.

Channel Plan	
CH Indication	TV Channel
02 – 12	E2 – E12
21 – 69	E21 – E69
74 – 78	X, Y, Z, Z+1, Z+2
80 – 99,100	S1 – S20,GAP
121 – 141	S21 – S41
142 – 153	R1 – R12

This DVD/VCR can receive Hyper and Oscar frequency bands.

- Press **MENU** to exit.

Note: To confirm that a channel has been added, press **CH**. (▲/▼).

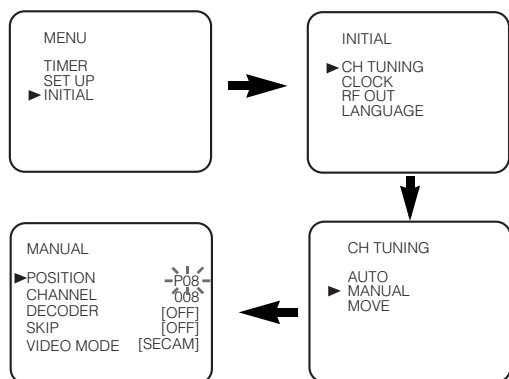


To Skip a Preset Channel

The channels you can no longer receive or seldom watch can be set to be skipped when you access channels by pressing **CH**. (▲/▼).

- Use the remote control for this procedure.

- Press **VCR**, then **MENU**.
- Press **▲** or **▼** to select "INITIAL", then press **►**.
- Press **▲** or **▼** to select "CH TUNING", then press **►**.
- Press **▲** or **▼** to select "MANUAL", then press **►**.
- Press **▲** or **▼** to select "POSITION", then press **►**.
- Press the **number buttons**, **▲** or **▼** to select relevant position number, then press **►**.
- Press **▲** or **▼** to select "SKIP", then press **►** to select [ON].
 - To memorize the channel again, press **►**. "ON" will change to "OFF".
- Press **MENU** to exit.

Note: To confirm that a channel has been deleted, press **CH**. (▲/▼).

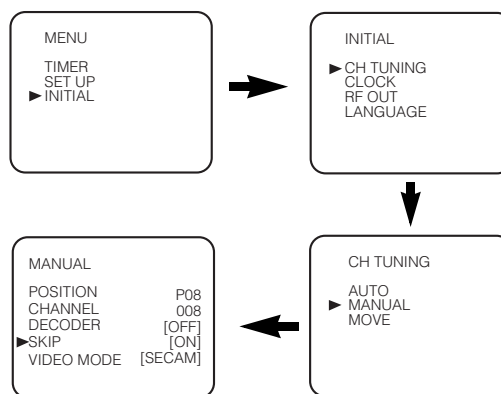


Channel Reprogramming

You can replace two channels.

- Use the remote control for this procedure.

- Press **VCR**, then **MENU**.
- Press **▲** or **▼** to select "INITIAL", then press **►**.
- Press **▲** or **▼** to select "CH TUNING", then press **►**.
- Press **▲** or **▼** repeatedly to select "MOVE", then press **►**.
- Press **▲** or **▼** repeatedly to select the position number you want to change the channel, then press **►**.
 - You cannot select a position number where " - - " appears next to the number. This is because SKIP is set to [ON] for this position number.
 - When a weak signal is received in Channel Reprogramming mode, you can change the background to solid blue by pressing **C.RESET**. If you press the button again, the background will return to the static screen.
- Press **▲** or **▼** repeatedly until the channel move to another position number, then press **►**.

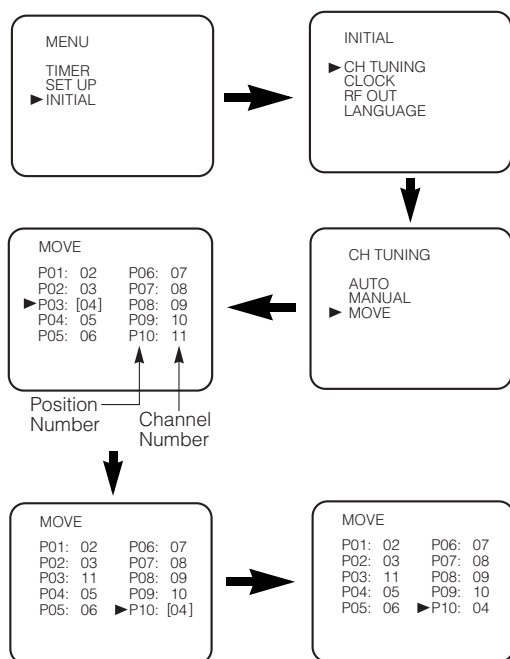7) Press **MENU**.

VCR Operation

VCR Features

Ensure that all VCR setting begins in VCR mode by pressing **VCR**.

(Make sure that the VCR OUTPUT indicator is lit.)

Playback

Tracking Adjustment

- Tracking adjustment will be activated automatically (Digital Tracking function) when you start playback.
- When playing pre-recorded tapes or tapes recorded on units other than your own, noise lines (black and white streaks) may appear on the playback picture. If this occurs, you can adjust the tracking control manually by pressing **CH**. (▲/▼) until the streaks disappear. To return to the DTR function, stop the tape once and start playback again.
- You can reduce the noise lines by pressing **CH**. (▲/▼) in Slow mode, too. Slow tracking adjustment is not set automatically.
- In the Still mode, press **SLOW**, and press **CH**. (▲/▼) until the streaks disappear. To return to the Still mode, press **PAUSE** again.

- Turn on the TV and select the video channel on the TV.
- Insert a prerecorded tape.

The DVD/VCR will turn on automatically. If the erase-protection tab has been removed, the DVD/VCR will start playback automatically.

- If the DVD/VCR power was already on, press **VCR** to switch to VCR mode.

- If playback does not start automatically, press **VCR**, then press **PLAY**.

- Tracking adjustment will be activated automatically (Digital Tracking function) when you start playback. To adjust the tracking manually, press **CH**. (▲/▼).

<If a tape is already in the DVD/VCR...>


- Using the buttons on the DVD/VCR
Just press **PLAY** on the DVD/VCR. Power will automatically turn on and playback will start. (Direct Button Operation)
- Using the buttons on the remote control
Press **FUNCTION** to turn on, and then press **PLAY**.

- Press **STOP** to stop playback.

Playback System Change

When you select **AUTO** by pressing **SPEED/SYSTEM**, this unit will distinguish the system (MESECAM or PAL) automatically according to the format of recorded tape during playback.

If the picture on the TV screen is black and white, select the system MESECAM or PAL manually by using **SPEED/SYSTEM**. Each time you press **SPEED/SYSTEM**, TV screen will change as follows.

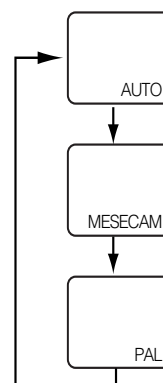

Speed Search

- 1) Press **▶▶** or **◀◀** during playback to view a videotape at a high speed in either a forward or reverse direction. In this mode, the sound will be muted.
- 2) Press the button again, the DVD/VCR will now search in super high speed. (This function will not operate for a NTSC tape.)
- 3) Press **PLAY** to return to normal playback.

Still Picture

Press **PAUSE** during playback to view a still picture on the TV screen.

- When the picture begins to vibrate vertically, stabilize the picture by pressing **CH** (▲/▼) in the Still mode.
- After the DVD/VCR has been in Still mode for 5 minutes, it will stop automatically to protect the tape and the video head.

<Note for "Speed Search" and "Still Picture">

- Usually there will be video "noise" lines (black and white streaks or dots) on the screen. This is normal. The still picture will, in addition to containing the "noise" lines, be black and white. This is not a fault of the machine but merely a by-product of the technology involved in producing a DVD/VCR with LP mode.

Slow Motion

- Press **SLOW** to reduce the playback speed. The DVD/VCR mutes the sound during slow motion. You can control the speed by pressing **▶▶** (faster) or **◀◀** (slower). Press **PLAY** to return to normal playback.
- If it is left in the Slow mode for more than 5 minutes, the DVD/VCR will automatically switch to the Stop mode.

Recording

Viewing and Recording the Same Programme

- 1) Insert a cassette tape with its erase-prevention tab in place. (If necessary, rewind or fast forward the tape to the point at which you want to begin recording.) Press **VCR**.
- 2) Press the **number buttons** or **CH** (▲/▼) to select the channel to be recorded.
- 3) Press **SPEED/SYSTEM** to select the tape speed (SP/LP).
- 4) Press **REC/OTR** to begin recording.
 - The REC indicator on the front panel comes on.
- 5) Press **STOP** when recording is completed.

Two Different Tape Speeds

Before recording, select the tape speed : SP mode (Standard Play) or LP mode (Long Play). The table below shows the maximum recording/playback time using E-60, E-120, E-180 or E-240 tapes in each mode.

Tape Type	Recording/Playback Time	
	SP Mode	LP Mode
E-60	1 hour	2 hours
E-120	2 hours	4 hours
E-180	3 hours	6 hours
E-240	4 hours	8 hours

Skipping Unwanted Programme Material During Recording

- 1) Press **PAUSE** when you want to temporarily halt recording.

You can check the remaining pause time with **■** marks on the TV screen. Each **■** mark represents 1 minute. After 5 minutes, the DVD/VCR will automatically switch to the Stop mode to prevent tape damage.
- 2) Press **PAUSE** or **REC/OTR** to resume recording.

Recording One Programme While Viewing Another

You can record one programme while viewing another. To start recording, follow steps **1)** to **4)** under "Viewing and Recording the Same Programme". Then, set the TV to the channel you want to watch.

To Monitor the Progress of Your Recording

Select the video channel on the TV.

Assemble Function

- You can record in continuation from previous programme on a pre-recorded tape.
- 1) Insert a pre-recorded tape. Press **PLAY** to start playback.
 - 2) Press **PAUSE** at the desired point on the tape.
 - 3) Press **REC/OTR**. The DVD/VCR will be in the Recording Pause mode.
 - 4) Press **CH** (▲/▼) to select the channel to be recorded.
 - 5) Press **REC/OTR** or **PAUSE**. The recording will begin.
 - 6) Press **STOP** when recording is completed.

OTR (One Touch Recording)

This function enables you to set the duration of a recording simply by pressing **REC/OTR**.

- 1) Follow steps 1) to 3) in "Viewing and Recording the Same Programme".
- 2) Press **REC/OTR** repeatedly until the desired recording length appears in the upper left corner of the TV screen.

● → ● [0:30] → ● [1:00]... → ● [7:30] → ● [8:00]
(Normal recording) (OTR: 30 minutes)

Recording stops when 0:00 is reached.

- To check time remaining during an OTR
Press **DISPLAY**.
- To change the recording length during an OTR
Press **REC/OTR** repeatedly until the desired length appears.
- To stop an OTR before recording is finished
Press **STOP**.
- To cancel the OTR but continue recording
Press **REC/OTR** repeatedly until "●" appears without the recording length.
- If there is no timer recording set after an OTR, this unit switches to DVD mode and the **TIMER REC** indicator flashes because the VCR is still on standby for timer recordings. Press **T-SET** on the remote control or **STOP/EJECT** on the front panel to cancel timer standby, then press **VCR** to use the VCR again.
If there is a timer recording set after an OTR, this unit switches to DVD mode and the **TIMER REC** indicator lights up, indicating that this unit is on timer standby. Press **T-SET** on the remote control or **STOP/EJECT** on the front panel to cancel timer standby, then press **VCR** to use the VCR again.

Auto Repeat Playback

The DVD/VCR has an auto repeat function that allows you to repeat a tape indefinitely without touching **PLAY**.

- Use the remote control for this procedure.
 - Insert a pre-recorded tape.
- 1) Press **VCR**, then **MENU**.
 - 2) Press ▲ or ▼ to select "SET UP", then press ►.
 - 3) Press ▲ or ▼ to select "AUTO REPEAT".
 - 4) Press ► so that "ON" appears next to "AUTO REPEAT" on the TV screen.

When in Stop mode, Auto Repeat mode will start automatically.

If the on-screen menu still remains, press **MENU** to exit, then press **PLAY**.

Note: Once you select the Auto Repeat mode, it stays in effect even after you turn off the DVD/VCR.


To Stop Playback

Press **STOP**.

To Exit the Auto Repeat Mode

Repeat steps 1) to 3). Then, press ►.

"OFF" will appear next to "AUTO REPEAT" on the TV screen. Press **MENU** to exit.

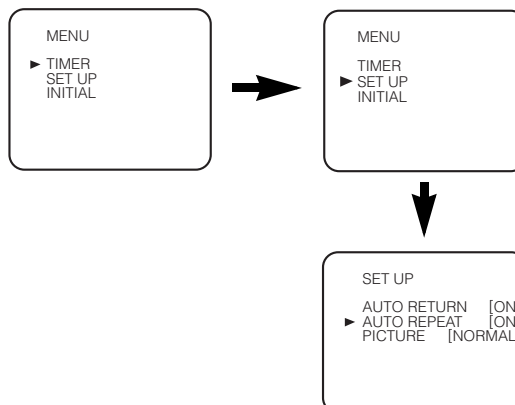


Picture Select

This function enables you to select the picture quality of a tape.

- Use the remote control for this procedure.

- 1) Press **VCR**, then **MENU**.
- 2) Press ▲ or ▼ to select "SET UP", then press ►.
- 3) Press ▲ or ▼ to select "PICTURE".
- 4) Press ► until the desired mode (NORMAL, SOFT, or SHARP) is indicated on the TV screen.
- 5) Press **MENU** to exit.

Note: Once you select the Picture Select mode, it stays in effect even after you turn off the DVD/VCR.

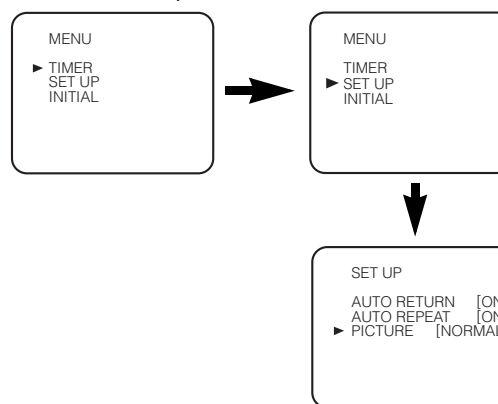

Automatic Operations

Automatic Rewind, Eject

When the end of a tape is reached during recording, playback, or fast-forward, the tape will automatically rewind to the beginning. After that, the DVD/VCR will eject the tape.

- The tape will not auto-rewind during timer recording or One Touch Recording.

Tape Eject

A tape can be ejected with the DVD/VCR power on or off (but the DVD/VCR must be plugged in).

- If a timer recording is set, press **STOP/EJECT** twice to eject a tape.

Real Time Tape Counter

- This shows the elapsed recording or playback time in hours, minutes, and seconds on screen. (Nothing is shown in the case of blank portion.)
- The “-” indication will appear when the tape is rewound further than the tape counter position “0:00:00”.

Timer Recording

You may programme the DVD/VCR to start and end a recording while you are away. You can set 8 programmes to record on specific days, daily or weekly within a 1-year period.

- Use the remote control for this procedure.
- Insert a cassette tape with its erase-prevention tab in place. (If necessary, rewind or fast forward the tape to the point at which you want to begin recording.)

- Press **VCR**, then **MENU**.
- Press **▲** or **▼** to select “TIMER”, then press **►**.

Note: If you have not set the clock yet, “CLOCK” setting menu appears. If so, follow the steps outlined in the “Setting the Clock”. Then, set the timer.

- When you press **►** after pressing **▲** or **▼** during steps 3) to 9), the input mode will move to the next step.
- If you do not press **►** within 5 seconds of setting an item, the input mode will move to the next step.
- Press **◀** to go back one step from the current setting during steps 4) to 9). If **◀** is pressed when the **TIMER NUMBER** is flashing, the entire programme contents will be erased.

- Programme number flashes. Press **▲** or **▼** repeatedly until the desired programme number appears. Then, press **►**.
- For once-only recording** : Press **▲** or **▼** repeatedly until the relevant month appears.

For daily recording : To record a TV programme at the same time on the same channel from Monday through Friday. While the month digit is flashing, press **▲** or **▼** repeatedly to select “MO-FR”.


For everyday recording : To record a TV programme at the same time on the same channel everyday. While the month digit is flashing, press **▲** or **▼** repeatedly to select “MO-SU”.

For weekly recording : To record a TV programme at the same time on the same channel every week. While the month digit is flashing, press **▲** or **▼** repeatedly to select “W-MO” (example: every monday).

- For once-only recording only** : Press **▲** or **▼** repeatedly until your desired day appears.
- Press **▲** or **▼** repeatedly until the relevant start hour appears. Next, enter the minute digit.
- Press **▲** or **▼** repeatedly until the relevant end hour appears. Next, enter the minute digit.
- Press **▲** or **▼** repeatedly until the relevant channel number appears.
- Press **▲** or **▼** repeatedly until the desired tape speed appears.
- Press **►**. Programme 1 is now completed.
 - To set another timer programme, repeat steps 3) to 10).
- Press **MENU** to exit.

- Press **T-SET** to activate a timer recording.

The VCR goes into timer-standby mode.

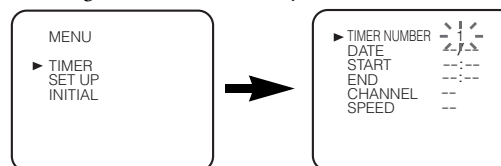

To Stop a Timer Programme Which Has Already Started

Press **STOP/EJECT** on the DVD/VCR.

Note: **STOP** on the remote control will not function in the Timer Recording mode.

To Correct Timer Programmes

If the unit is already in timer standby mode, press **STOP/EJECT** on the unit or **T-SET** to exit from the standby mode.

- Repeat steps 1) to 3) in the “Timer Recording”.
- Select the setting you want to change using **►** or **◀**.
- Enter the correct numbers using **▲** or **▼**, then press **►**.
- Press **MENU** to exit.
- Press **T-SET** to return to timer standby mode.


To Cancel or Check the Start/End Time

If the unit is already in timer standby mode, press **STOP/EJECT** on the unit or **T-SET** to exit from the standby mode.

- Repeat steps 1) to 2) in the “Timer Recording”.
- Select a programme number you want to check using **▲** or **▼**. The details of selected programme appears on the TV screen. You may cancel the entire programme by pressing **◀**.
- Press **MENU** to exit.

Avoid Overlap of TIMER Programmes...

A timer programme does not work while another programme is under execution.

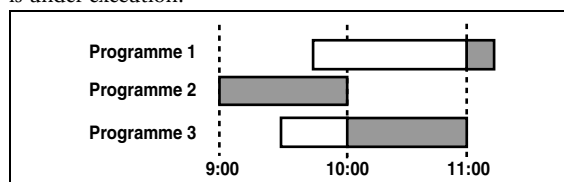

Hint for Timer Recording

- If either there is a power failure or this unit is unplugged for more than 30 seconds, clock and all timer settings are lost.
- If a tape is not in this unit or does not have the erase-prevention tab, the **TIMER REC** indicator flashes and timer recording cannot be performed. Please insert a recordable tape.
- If a tape runs out before a timer recording is finished, the unit ejects the tape and switches into DVD mode automatically. The **TIMER REC** indicator flashes. Press **T-SET** to activate VCR function.
- Once the unit goes into Timer-standby mode, no VCR functions are available until **T-SET** is pressed. (**OUTPUT** on the front panel and **VCR** on the remote control will not function.)
- When all timer recordings are finished, the **TIMER REC** indicator will flash.

- Press **T-SET** to activate VCR functions after your timer recording is finished.
- DVD functions are available during Timer-standby mode and Timer recording. You don't have to stop your timer recording.

Auto Return

If there are any remaining programmes including Daily, Everyday, & Weekly, AUTO RETURN will not operate.

- 1) Press **VCR**, then **MENU**.
- 2) Press **▲** or **▼** repeatedly to point to "SET UP", then press **▶**.
- 3) Press **▲** or **▼** to point to "AUTO RETURN", then press **▶**.
[ON] will appear next to "AUTO RETURN".
- 4) Press **MENU**.

Watch the Recorded Timer Programme

Press **T-SET** to turn on the DVD/VCR, then press **PLAY**.

Quick-Find

This function enables you to search and confirm the contents of the recorded programme(s) using the index mark.

- Use the remote control for this procedure.
- The tape must be fully rewound.

- 1) Press **VCR**, then **QUICK-FIND**.

To Skip to the Beginning of Next Programme

- 1) Press **QUICK-FIND**.

To View at Normal Speed

- 1) Press **PLAY**. The Quick-Find is cancelled.

- Note:**
- This function will not operate in the Recording mode.
 - When you want to cancel the Quick-Find while in progress, press **STOP**.
 - When the end of a tape is reached during the Quick-Find, the tape will automatically rewind to the beginning. After rewinding finishes, the DVD/VCR will eject the tape.

Index Search

- The index mark will be made automatically when **REC/OTR** is pressed. It will also be marked at the starting point of Timer recording and OTR.
- The index mark is not recorded if **PAUSE** is pressed and released during recording.
- The time gap between index marks on the tape should be greater than 1 minute for SP recording and 2 minutes for LP recording.
- Use the remote control for this procedure.

- 1) Press **VCR**, then **SEARCH MODE**.
- 2) Press **▲**, **▼** repeatedly until the number of programmes that you want to skip appears.
- 3) Press **◀** or **▶**.
The DVD/VCR begins rewinding or fast forwarding to the beginning of desired programme.

When the preset programme is reached, the DVD/VCR will start playback automatically.

- Note:**
- Index Search can be set up to 20.
 - This function will not operate in the Recording mode.

- Operations must be followed up within 30 seconds, from steps **2)** to **3)**. Otherwise the Index Search mode will be cancelled.
- To exit the Index Search mode, press **MENU** in step **2)**. Or press **STOP** after step **3)**.

Time Search

If a tape includes both programmes recorded in the PAL system and ones recorded in the NTSC system, this function may not be operated correctly.

- Use the remote control for this procedure.


- 1) Press **VCR**, then **SEARCH MODE** twice.
- 2) Press **▲**, **▼** repeatedly until the desired time appears.
- 3) Press **◀** or **▶**.
The DVD/VCR begins rewinding or fast forwarding to the specified point.
When 0:00 is reached, the DVD/VCR will start playback automatically.

- Note:**
- Time Search can be set up to 9 hours 59 minutes (9:59).
 - This function will not operate in the Recording mode.
 - Operations must be followed up within 30 seconds, from steps **2)** to **3)**. Otherwise the Time Search mode will be cancelled.
 - To exit the Time Search mode, press **MENU** in step **2)**. Or press **STOP** after step **3)**.


Copying a Video Tape

Connect the recording DVD/VCR (this unit), playing VCR (another VCR) and your TV as outline in the following diagrams.

Using scart jacks

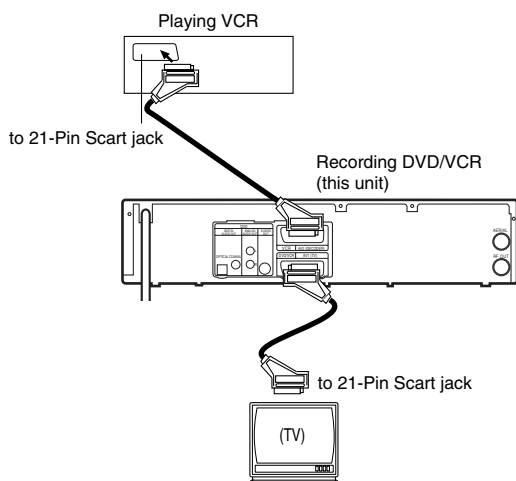

Using AV front terminals

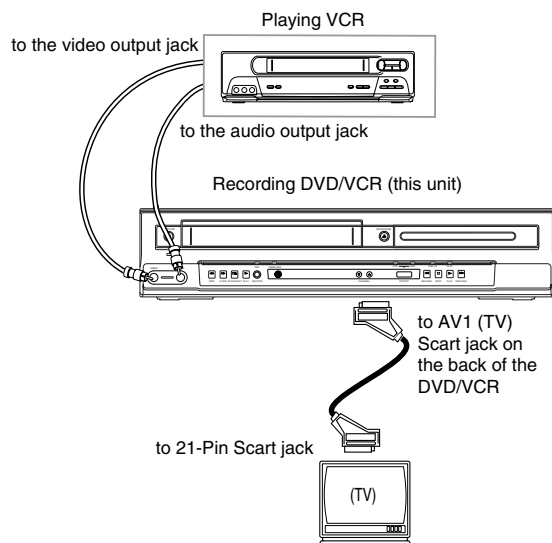

- 1) Insert a pre-recorded videocassette into the playing VCR.
- 2) Insert video cassette tape with its erase prevention tab in place into the cassette compartment of the recording DVD/VCR.
- 3) Press **SPEED/SYSTEM** to select the desired recording speed (SP/LP).
- 4) Select "AV2" or "AV3" position on the recording DVD/VCR. See "External Input Mode (for VCR features)". (Refer to page 9.)
- 5) Press **REC/OTR** on the recording DVD/VCR.
- 6) Begin playback of the tape in the playing VCR.

- 7) To stop recording, press **STOP/EJECT** on the recording DVD/VCR, then stop playback of the tape in the playing VCR.


Note:

- For best results during dubbing, use the DVD/VCR's front panel controls whenever possible. The remote control might affect the playing VCR's operation.
- If video or colour fades in and out, you may be copying a copy guarded video tape.
- Unauthorised recording of copyrighted materials may infringe on the rights of copyright owners, violate copyright laws and may not record clearly.

Status Display

To check the Counter, or Clock & Channel number, press **DISPLAY**. Each time you press **DISPLAY**, TV screen will change as illustrated:

When you select the channel using the **number buttons**, select the desired channel (position number).

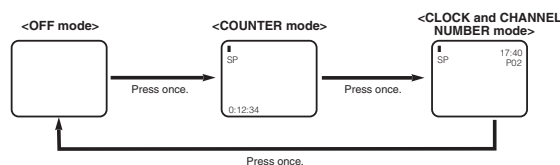

Note: If the on screen display or indicators on the front panel show an abnormal reading or no reading, unplug this unit for 30 seconds, then replug it again. Please note that language, clock, and timer settings will be cleared after disconnection.

DVD Operation

Basic Playback

DVD-V CD MP3 VCD

Getting started


- Turn on the power of the TV, amplifier and any other components which are connected to this unit.
- Make sure the TV and audio receiver (commercially available) are set to the correct channel.
- Make sure that the DVD OUTPUT indicator is lit. If not, press **DVD** to switch to DVD mode.
- Unless stated, all operations described are based on remote control use. Some operations can be carried out on main unit.

1) Press **FUNCTION**.

- Make sure that the DVD OUTPUT indicator is lit. If not, press **DVD** to switch to DVD mode.

2) Press **OPEN/CLOSE** to open disc loading tray.

3) Place the chosen disc on the tray, with the label facing up.

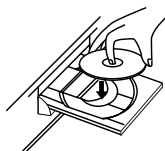

4) Press **PLAY**.

- The tray will close automatically, and playback will then start from the first chapter or track of the disc.
- When you play back a DVD with a title menu recorded, it may appear on the screen. In this case, refer to "Title Menu".

5) Press **STOP** to stop playback.

Note: • A "prohibited icon" may appear at the top-right on the TV screen during operation, warning that a prohibited operation has been encountered by this unit or the disc.



- Some DVDs may be played from title 2 or 3 due to specific programs.
- During the playback of two layered disc, pictures may stop for a moment. This happens while the 1st layer is being switched to the 2nd layer. This is not a malfunction.
- DVDs recorded with the NTSC system can be viewed on PAL, NTSC or Multi system TV. (Refer to page 24.)
- Depending on the TV, when playing back a NTSC DVD on a PAL TV, the picture may roll up or down, shrink vertically and black bars may appear at the both top and bottom of the screen.
- It may take a time to deliver the picture or the sound. This is not a malfunction.

Disc Menus

DVD-V

1) Press **MENU**.

- The DVD main menu will appear.

2) If the feature is not available, symbol may appear on the TV screen.

3) If disc menu is available on the disc, audio languages, subtitle options, chapters for the title and other options will appear for selection.

4) Press **Arrow** (◀ / ▶ / ▲ / ▼) to select an item, and **ENTER** to confirm selection.

Title Menu

DVD-V

1) Press **TOP MENU**.

- The title menu will appear.

2) If the feature is not available, symbol may appear on the TV screen.

3) Press **Arrow** (◀ / ▶ / ▲ / ▼) to select an item, and **ENTER** to confirm selection.

- Playback will begin at the selected Title.

VCD

1) The title menu will appear.

2) Press the **number buttons** to select an item. Playback will start.

Calling up a Menu Screen During Playback

DVD-V

- Press **MENU** to call up the DVD main menu.
- Press **TOP MENU** to call up the title menu.

Note: Menu operations may vary depending on the disc. Refer to the manual included in the disc for details.

About the PBC Function of Video CD

VCD

- This unit conforms to Video CD ver. 1.1 (standard) and ver. 2.0 (with PBC function).
- "PBC" stands for Play Back Control.
- Video CD with PBC function has its original menu. Menu operation may vary depending on the disc. Refer to the manual included in the disc for details.

Cancelling and Calling Back PBC Function

When playing Video CDs with PBC function, some operations (e.g. select and repeat tracks) cannot be performed unless the PBC function is cancelled temporarily.

1) Insert a Video CD.

- Title menu will appear on the display.

2) Press **STOP**.

3) Press the **number buttons** to enter the desired Track number.

- PBC function is now cancelled and the playback of the Video CD will start.


4) To call back PBC function, press **STOP** twice, and then press **PLAY**.

MP3 Playback

MP3

Insert an MP3-format disc, then press **MENU** to call up the MP3 menu on the TV screen.


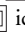
- 1) Press **▲** or **▼** to select the desired group or track.

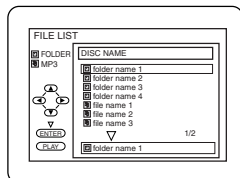

- If a group is selected, press **▶** or **ENTER** to go on to the track selection screen. Press **▲** or **▼** to choose a track, then press **PLAY** or **ENTER**.
- If a track is selected, press **PLAY** or **ENTER** to start playing the track, and the subsequent tracks will be played.
- Press **◀** to go back to the previous hierarchy.
- Press **TOP MENU** to return to the first item.

- 2) Press **STOP** to stop playback.

Note: • Folders are known as Groups, and files are known as Tracks.

- MP3 files are accompanied by  icon.
- Folders are accompanied by  icon.
- A maximum of 255 folders can be recognized.
- A maximum of 512 files can be recognized.
- Up to 8 hierarchies can be created.
- The name of group and track can be displayed in up to 25 characters. Unrecognizable characters will be replaced with asterisks.
- Unplayable groups or tracks may be displayed depending on the recording conditions.

This unit recommends the files recorded under the following circumstances:

- Sampling frequency: 44.1kHz or 48kHz
- Constant bit rate: 112kbps ~ 320kbps

Resume

DVD-V

CD

MP3

VCD

- 1) During playback, press **STOP**.
 - Resume message will appear on the TV screen.
- 2) Press **PLAY**. Playback will resume from the point at which playback was stopped.
 - To cancel resume, press **STOP** twice.

Note: • For MP3 files, playback will resume from the beginning of the track at which playback was stopped.

- The resume information stays on even when the power is turned off.

Pause

DVD-V

CD

MP3

VCD

- 1) During playback, press **PAUSE**.
 - Playback will be paused and sound will be muted.
- 2) To continue playback, press **PLAY**.

Note: On DVDs, set "STILL MODE" to "FIELD" in the DISPLAY menu if pictures in the pause mode are blurred. (Refer to page 24.)

Step by Step Playback

DVD-V

VCD

- 1) During playback, press **PAUSE**.
 - Playback will be paused and sound will be muted.
- 2) The disc advances by one frame each time **PAUSE** is pressed.
- 3) To exit step by step playback, press **PLAY**.

Note: On DVDs, set "STILL MODE" to "FIELD" in the DISPLAY menu if pictures during step by step playback are blurred. (Refer to page 24.)

Fast Forward / Reverse Search

DVD-V

CD

MP3

VCD

- 1) During playback, press **▶▶** or **◀◀** repeatedly to select the required forward or reverse speed.
 - For DVDs and Video CDs, fast forward or reverse search speed is different depending on the disc.
 - For DVDs, approximate speed is 1(x2), 2(x8), 3(x50), and 4(x100).
 - For Video CDs, approximate speed is 1(x2), 2(x8), and 3(x30).
 - If you are using **SKIP/FWD** or **REV/SKIP** on the front panel, press and hold it for more than 1.5 sec. When you reach the desired speed, release the button.
 - For Audio CDs, approximate speed is x16.
 - For MP3, approximate speed is x8.
- 2) To return to normal playback, press **PLAY**.

Note: On DVDs, set "STILL MODE" to "FIELD" in the DISPLAY menu if pictures during fast forward and reverse search are blurred. (Refer to page 24.)

Slow Forward / Reverse

DVD-V

VCD

- 1) During playback, press **PAUSE**.
- 2) Press **▶▶** or **◀◀**.
 - Slow motion playback will begin and sound will be muted.
- 3) Press **▶▶** or **◀◀** repeatedly to select the required speed. Slow forward or reverse speed varies with the disc. Approximate speed is 1(1/16), 2(1/8), and 3(1/2).
 - If you are using **SKIP/FWD** or **REV/SKIP** on the front panel, press and hold it for more than 1.5 sec. When you reach the desired speed, release the button.
- 4) To return to normal playback, press **PLAY**.

Note: • Slow Reverse is not available on Video CDs.

- On DVDs, set "STILL MODE" to "FIELD" in the DISPLAY menu if pictures in the slow motion playback mode are blurred. (Refer to page 24.)

Zoom

DVD-V

VCD

The Zoom function allows you to enlarge the video image and to pan through the enlarged image.

- 1) Press **ZOOM** during playback.
 - Playback will continue.
- 2) Press **ZOOM** repeatedly to select the required zoom factor: x2, x4 or OFF.
- 3) Use **Arrow** (**◀** / **▶** / **▲** / **▼**) to slide the zoomed picture across the screen.
- 4) To exit Zoom mode, press **ZOOM** to set to OFF.

Note: • If you press **ENTER**, the zoom position window appears at the bottom-right on the TV screen. If you press it again, that (the zoom position) window disappears.

- Zooming function does not work while the disc menu is showing up.

- x4 zoom is not available on some discs.
- Only x2 zoom is available on Video CDs.

Audio Language

DVD-V

This unit allows you to change audio languages during DVD disc (if multi language available) playback.

- 1) Press **AUDIO** during playback.
- 2) Press **AUDIO** repeatedly to select your desired language.

Note: • If your language is not shown after pressing **AUDIO** several times, the disc may not have that language. However, some discs allow you to change audio language setting in the disc menu. (Operation varies with the disc, so refer to the manual included in the disc.)

- If you choose a Language that has a 3-letter abbreviation, the abbreviation will be displayed every time you change the Audio language setting. If you choose any other languages, '---' will be displayed instead. (Refer to page 25.)

Subtitle Language

DVD-V

This unit allows you to change languages for subtitle during DVD disc (if available) playback.


- 1) Press **SUBTITLE** during playback.
- 2) Press **SUBTITLE** repeatedly to select your desired subtitle language.
 - The selected language will be displayed on the display bar at the top of the screen.
- 3) To turn off subtitles, press **SUBTITLE** repeatedly until "OFF" appears.

Note: • If your language is not shown after pressing **SUBTITLE** several times, the disc may not have that language. However, some discs allow you to change subtitle language setting in the disc menu. (Operation varies with the disc, so refer to the manual included in the disc.)


- When "NOT AVAILABLE" appears on the TV screen, it means no subtitle is recorded on the scene.
- If you choose a Language that has a 3-letter abbreviation, the abbreviation will be displayed every time you change the Subtitle language setting. If you choose any other languages, '---' will be displayed instead. (Refer to page 25.)

Camera Angle

DVD-V

Some DVD discs contain scenes which have been shot simultaneously from various angles. You can change the camera angle when the () icon appears on the screen.

- 1) Press **ANGLE** during playback.
 - The selected angle will be displayed on the display bar at the top of the screen.
- 2) Press **ANGLE** repeatedly to select your desired angle.

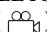Note: If the ANGLE ICON setting is "OFF" in the DISPLAY menu, the () icon will not appear.

Stereo Sound Mode

CD

VCD

- 1) Press **AUDIO** repeatedly during playback to select one among "STEREO", "L-CH" and "R-CH".
STEREO - both right and left channels are active (stereo)
L-CH - only left channel is active
R-CH - only right channel is active

Note: If the Virtual Surround setting is "ON" or during a DTS CD is being played back, the sound mode is fixed to "STEREO", and can not be changed.

Virtual Surround

DVD-V


CD

MP3

VCD

You can enjoy stereophonic virtual surround effects on your existing stereo system.

 - 1) Press **MODE** during playback.



- 2) Press **ENTER** to change a value to "1" (Natural effect), "2" (Emphasized effect) or "OFF" (original sound).
- 3) Press **MODE** or **RETURN** to exit.

Note :

- Virtual Surround will not be effective if the sound mode is set to something other than "STEREO" (for Audio CDs and Video CDs only).
- Turn down the level or turn it "OFF" if the sound is distorted.

Track Search

CD

MP3

VCD

There are three ways to begin the playback of a specific track.


Using the number buttons


- 1) Press the **number buttons** to enter the desired Track number.
 - Playback will start at the selected track.
 - For single digit tracks (1-9), press a single number (e.g. to play track 3, press **3**).
 - To play track 26, press **+10, 2, 6**.


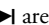
Using SEARCH MODE



- 1) Press **SEARCH MODE**.
 - The Track Search display appears.
- 2) Within 30 seconds, select a desired track number using the **number buttons**. For single digit track number, press **0** first when there are 10 or more tracks in the disc.
 - Playback will start at the selected track.

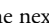Using SKIP ,

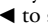During playback, press **SKIP ** to move to the next track. Press it repeatedly to skip subsequent tracks.

Press **SKIP ** to go back to the beginning of the current track. Press it repeatedly to go back to the previous tracks.

- If **SKIP **, **SKIP ** are pressed while the playback is paused, the playback will be paused again after skipping the track.

 
Note: **SKIP **, **SKIP ** are not available when playback is stopped.

Title / Chapter Search

DVD-V

Using SEARCH MODE

- 1) During playback, press **SEARCH MODE** once for the "Chapter Search", twice for the "Title Search".



- 2) Enter the desired chapter/title number using the **number buttons**.

Using the number buttons

- 1) During playback, press the **number buttons** to enter the desired chapter number.
 - Playback will start at the selected chapter.
 - For single digit chapters (1-9), press a single number (e.g. to play chapter 3, press **3**).
 - To play chapter 26, press **+10, 2, 6**.

Note: • Depending on the disc being played, using the **number buttons** cannot be performed.

Using SKIP ◀◀, ▶▶

During playback, press **SKIP ▶▶** to go to the next chapter. Press it repeatedly to skip subsequent chapters. Press **SKIP ◀◀** to go back to the beginning of the current chapter. Press it repeatedly to go back to the previous chapter.

Time Search

DVD-V

CD

VCD

- 1) During playback, press **SEARCH MODE** repeatedly until the "Time Search" screen appears on the TV screen.



- 2) Within 30 seconds, enter a desired disc time using the **number buttons**.
 - Playback will start at the specified time.
 - For DVDs, enter a desired time of the current title.
 - For Audio CDs and Video CDs, enter a desired time of the current track.

- 3) Press **CLEAR** to erase the incorrect input.

Note: • "0" appears automatically when there is no need to enter a number. For example, "0:0:_" appears automatically in the Time Search display if the total time of the disc is less than 10 minutes.

- Time Search is not available on some discs.

Marker Setup

DVD-V

CD

VCD

Use markers to memorise your favourite places on a disc.

- 1) During playback, press **SEARCH MODE** repeatedly until the "Marker Setup" screen appears on the TV screen.



- 2) Press ◀ or ▶ to select 1, 2, 3, 4, 5, 6, 7, 8, 9, or 10 and ensure that " _ _ _ _ : _ _ " appears in the display.
- 3) When you reach the desired point, press **ENTER**.
 - The Title or Track and elapsed time will appear on the TV screen.

- 4) To return to a marker later, press **SEARCH MODE** repeatedly until the Marker Setup screen appears and ◀ or ▶ to choose the desired marker, then press **ENTER**.

Note: • Opening the disc tray, turning off the power or selecting "AC" at step 2) and press **ENTER** will erase all markers.

- To clear a marker, using ◀ or ▶, position the cursor on to the marker number to be cleared and press **CLEAR**.
- You can mark up to 10 points.
- Press **SEARCH MODE** or **RETURN** to exit.

Repeat

 
- **REPEAT** is available only during playback.

REPEAT TITLE / CHAPTER

DVD-V

To activate the repeat function, press **REPEAT** during playback.

- The Repeat mode changes as described below every time you press the button.



Note: • Repeat Title/Chapter is not available with some scenes.

- Repeat playback does not function during repeat A-B playback.

REPEAT TRACK

CD

VCD


To activate the Repeat function, press **REPEAT** during playback.

- The Repeat mode changes as described below every time you press the button.



Note: • Repeat playback does not function during repeat A-B playback.

MP3

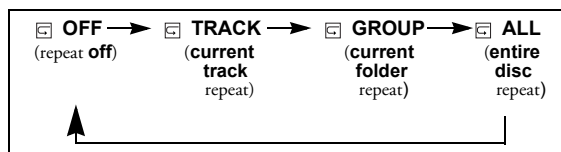

REPEAT A-B

DVD-V

CD

VCD

- 1) Press **A-B** at your chosen starting point.
 - **A-** appears briefly on the TV screen.
- 2) Press **A-B** again at your chosen end point.
 - **A-B** appears briefly on the TV screen, and the repeat sequence begins.
- 3) To exit the sequence, press **A-B**.

Note: • The repeat A-B section can only be set within the current title (for DVDs), or the current track (for Audio CDs and Video CDs).

- Repeat A-B is not available with some scenes in DVD.
- To cancel the point A which was set, press **CLEAR**.
- Repeat A-B playback does not function during chapter, title, track or all repeat playback.


Programmed Playback

CD

MP3

You may determine the order in which tracks will be played.

- 1) In Stop mode, press **MODE**.
 - The PROGRAM screen will appear.

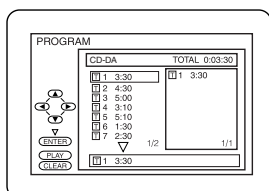

- 2) Press **▲** or **▼** to select a track, then press **ENTER**.
 - Up to 99 tracks can be stored.
 - Press **CLEAR** to erase the most recently entered programme.
 - To erase all tracks in the programme at once, select "ALL CLEAR" at the bottom of the list and press **ENTER**.
 - When selecting an MP3 file or folder, use **Arrow** as follows:
 - Press **▶** to go the next hierarchy.
 - Press **◀** to go back to the previous hierarchy.
 - When more than 8 tracks or files are programmed, press **SKIP** **◀◀**, **▶▶** to see all the pages.
- 3) Press **PLAY** to start the programmed playback.

Note: • While a programme is being played back, **STOP** works as follows:
Press **STOP**, and then **PLAY** next, so that the programmed playback restarts.
(CD playback restarts from the current position. MP3 playback restarts from the beginning of the current track.)

Press **STOP** twice and **PLAY** next, so that playback restarts from the first track in the original order.
However, your programmed playback can be restarted when you follow the above steps. (Your programme is still stored unless either the disc tray is open or the unit is turned off.)

- To repeat the current track in the programme, press **REPEAT** repeatedly until **TRACK** appears during playback.
- To repeat the entire programme press **REPEAT** repeatedly until **ALL** appears during playback.


Random Playback

CD

MP3

This shuffles the playing order of tracks instead of playback in the sequence.

- 1) In Stop mode, press **MODE** repeatedly until the "RANDOM" screen appears on the TV screen.

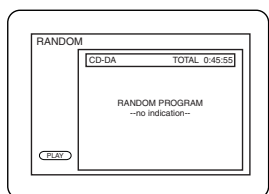

- 2) Press **PLAY** to start random playback.

 
Note: • If you like to repeat the current track in the random selections, press **REPEAT** repeatedly until **TRACK** appears during playback. If you like to repeat the entire random selections, press **REPEAT** repeatedly until **ALL** appears during playback.

On-Screen Information

You can check the information about the current playback by pressing **DISPLAY**.

DVD-V

- 1) Press **DISPLAY** during playback.
 - Current chapter number/ total chapters, elapsed time and remaining time of the current chapter, and current playback status will be displayed.




- 2) Press **DISPLAY** again.
 - Current title number/ total titles, elapsed time and remaining time of the current title, and current playback status will be displayed.
- 3) Press **DISPLAY** the third time.
 - The bit rate (the amount of audio and video data currently being read) and current playback status will be displayed.
 - Current repeat setting appears only when the repeat setting is active.
(◁ C: Chapter repeat/ ▷ T: Title repeat/ A ▷ B: A-B repeat)
 - If you are playing a 2-layered disc, the layer number will also be displayed.
(L0: Layer 0 is playing, L1: Layer 1 is playing)
- 4) Press **DISPLAY** repeatedly until on-screen information disappears.

CD

VCD

 
- 1) Press **DISPLAY** during playback.
 - Current track number/ total tracks, elapsed time and remaining time of the current track, and current playback status will be displayed.
 - Current repeat setting appears only when the Repeat setting is active.
(▷ T: Track repeat/ ▷ A: All Tracks repeat/ A ▷ B: A-B repeat)



- 2) Press **DISPLAY** again.
 - Current track number/ total tracks, elapsed time and remaining time of the current disc, and current playback status will be displayed.
 - Current repeat setting appears only when the Repeat setting is active.
- 3) Press **DISPLAY** repeatedly until on-screen information disappears.

MP3

 - 1) Press **DISPLAY** during playback.
 - The name of the file currently in play and current playback status will be displayed.




- 2) Press **DISPLAY** again.

DVD Setup

Language Setting

Language setting may be available with some DVDs.

- 1) Press **SETUP** in Stop mode.
- 2) Press ◀ or ▶ to select "CUSTOM", then press **ENTER**.
 - CUSTOM mode screen will appear.
- 3) Press ◀ or ▶ to select "LANGUAGE", then **ENTER** to confirm.

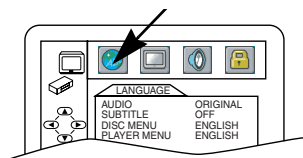

- 4) Press ▲ or ▼ to select the below items, then press **ENTER**.
- 5) Press ▲ or ▼ to select an option, then press **ENTER**.
- 6) Press **SETUP** to exit.

AUDIO : *1*2*3 :

- Sets the audio language.
- The default setting is "ORIGINAL" (original audio language of the disc.)

SUBTITLE : *1*2*3 :

- Sets the subtitle language.
- The default setting is "OFF".

DISC MENU : *1*2 :

- Sets the DVD menu language.
- The default setting is "ENGLISH".

PLAYER MENU : **QUICK**

- Sets the language of the On-Screen display of the DVD player.
- The default setting is "ENGLISH".

Note:

- *1 : If "OTHER" is selected in the "AUDIO", "SUBTITLE" or "DISC MENU" screen, press 4-digit number to enter the code for a language you choose. (Refer to the language code list on page 25.)
- *2 : Only the languages supported by the disc can be selected.
- *3 : Even if DVDs contain multiple audio or subtitle languages, "LANGUAGE" setting screen for "AUDIO" or "SUBTITLE" may not be available with some discs. Then, use **AUDIO** or **SUBTITLE**. Details are on page 20.


Audio Setting

Choose the appropriate audio settings for your equipment. It only affects during the playback of DVDs.

- 1) Press **SETUP** in Stop mode.
- 2) Press ◀ or ▶ to select "CUSTOM", then press **ENTER**.
 - CUSTOM mode screen will appear.

- Current track number/ total tracks, elapsed time of the current track, and current playback status will be displayed.
 - Current repeat setting appears only when the Repeat setting is active. (◀ T: Track repeat/ ◀ G: Group repeat/ ◀ A: Disc repeat)
- 3) Press **DISPLAY** repeatedly until on-screen information disappears.

- 3) Press ◀ or ▶ to select "AUDIO", then **ENTER** to confirm.

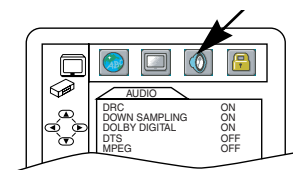

- 4) Press ▲ or ▼ to select the below items.
- 5) Press **ENTER** repeatedly to select "ON" or "OFF".
- 6) Press **SETUP** to exit.

DRC (Dynamic Range Control) :

ON: to compress the sound range.

OFF: to output an original sound range.

- This function is only available on DVDs recorded in the Dolby Digital format.
- The default setting is "ON".

DOWN SAMPLING :

ON: to convert 96kHz format into 48kHz.

OFF: to output the original sound.

- This function is only available when this unit is connected to another source using one of the DIGITAL OUT jacks.
- When playing a disc with copyright protection, the sound will be down sampled at 48kHz, even if you set to "OFF".
- The default setting is "ON".

DOLBY DIGITAL : **QUICK**

ON : to output Dolby Digital signals.

OFF : to convert Dolby Digital signals to PCM (2 channel) signals.

- Set to "ON" when this unit is connected to a Dolby Digital decoder.
- The default setting is "ON".

DTS : **QUICK**

ON : to output DTS sound.

OFF : not to output DTS sound.

- Set to "ON" when this unit is connected to a DTS decoder.
- The default setting is "OFF".

MPEG : **QUICK**

ON : to output MPEG formatted sound.

OFF : to convert MPEG signals to PCM signals.


- Set to "ON" when this unit is connected to a MPEG decoder.
- The default setting is "OFF".

Display Setting

You can change the display functions.

- 1) Press **SETUP** in Stop mode.
- 2) Press ◀ or ▶ to select "CUSTOM", then press **ENTER**.
 - CUSTOM mode screen will appear.

- 3) Press ◀ or ▶ to select "DISPLAY", then **ENTER** to confirm.

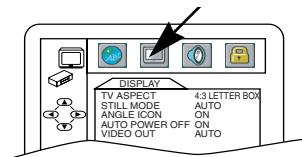

- 4) Press ▲ or ▼ to select the below items, then press **ENTER**.
Select options following instructions below.

- 5) Press **SETUP** to exit.

TV ASPECT : QUICK

4:3 LETTER BOX : When viewing a 16:9 picture on a 4:3 aspect TV screen, black bars appear on the top and bottom of the screen.

4:3 PAN & SCAN : When viewing a 16:9 on a 4:3 aspect TV screen, a full height picture with both sides trimmed is presented.

16:9 WIDE : if a wide-screen TV is connected to this unit, select this setting.

- Press ▲ or ▼ to select a setting, then press **ENTER**.
- The default setting is "4:3 LETTER BOX".

STILL MODE :

AUTO : select it usually.

FIELD : pictures in the Still mode will be stabilized although they will be coarse due to a little amount of data.

FRAME : pictures in the Still mode will be highly defined although they will be blurred due to outputting two fields at the same time.

- Press ▲ or ▼ to select an option, then press **ENTER**.
- The default setting is "AUTO".

ANGLE ICON :

ON : to show the angle icon when multiple camera angles are available during DVD playback.

OFF : to hide the angle icon.

- Press **ENTER** repeatedly to select "ON" or "OFF".
- The default setting is "ON".

AUTO POWER OFF :

ON : to turn off the unit automatically after 35 minutes of no use.

OFF : to keep this unit on.

- Press **ENTER** repeatedly to select "ON" or "OFF".
- The default setting is "ON".

VIDEO OUT :

AUTO: to change video out system (PAL/NTSC) automatically according to the format of an inserted disc.

- For the discs recorded with NTSC system, the NTSC signal will be output and pictures of the discs can be viewed on an NTSC or Multi system TV.
- For the discs recorded with PAL system, the PAL signal will be output and pictures of the discs can be viewed on a PAL system TV.

PAL : to view pictures of the discs recorded with NTSC system on a PAL system TV. The modified PAL signal will be output.

Note: • The discs of recorded with PAL system cannot be viewed on an NTSC system TV.


- Press **ENTER** repeatedly to select "PAL" or "AUTO".
- The default setting is "AUTO".

Parental Control

Parental Control limits the DVD viewing that exceeds your settings. The password is required to change the "PARENTAL LEVEL".

This feature prevents your children from viewing inappropriate materials.

- 1) Press **SETUP** in Stop mode.
- 2) Press ◀ or ▶ to select "CUSTOM", then press **ENTER**.
• CUSTOM mode screen will appear.
- 3) Press ◀ or ▶ to select "PARENTAL", then press **ENTER**.

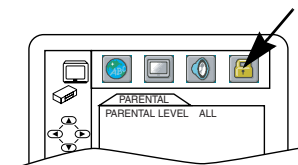

- 4) Press the **number buttons** to enter your 4-digit password.
• When doing this for the first time, enter any 4-digit number by pressing the **number buttons** (except for 4737), then press **ENTER**. That number will be used as the password from the second time onward. Record your password in case you forget it.
• If you forget the password, press 4, 7, 3, 7. The original password will be cleared and parental levels will be set to "ALL". Enter a new 4-digit password, then press **ENTER**.
- 5) Press ▲ or ▼ to select "PARENTAL LEVEL", then press **ENTER**.
- 6) Press ▲ or ▼ to select the desired level, then press **ENTER**.
For details, see below.
- 7) Press **SETUP** to exit.

PARENTAL LEVEL

"ALL" : All parental locks are cancelled.

"8" : DVD softwares of any grades (adult/general/children) can be played back.

"7 to 2" : Only DVD softwares intended for general use and children can be played back.

"1" : Only DVD softwares intended for children can be played back.


Note: • This function may not work on some DVDs. Make sure if the parental lock function operates in the way you have set.

To Change the Password

- 1) Follow the steps 1) to 4) above.
- 2) Press ▲ or ▼ to select "CHANGE", then press **ENTER**.
- 3) Enter a new 4-digit password, then press **ENTER**.
- 4) Press **SETUP** to exit.

To Reset All the Settings of the SET UP screen

- 1) Press **SETUP** in Stop mode.
- 2) Press ◀ or ▶ to select "INIT.", then press **ENTER**.

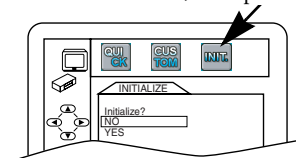

- 3) Press ▲ or ▼ to select "YES", then press **ENTER** twice. All the settings (except for "PARENTAL") will be cleared.
• To cancel the initialization, select "NO".
- 4) Press **SETUP** to exit.

<u>Language</u>	<u>Code</u>	<u>Language</u>	<u>Code</u>	<u>Language</u>	<u>Code</u>	<u>Language</u>	<u>Code</u>	
A-B								
Abkhazian	4748	Frisian	5271	Malay	5965	Somali	6561	
Afar	4747	Galician	5358	Malayalam	5958	Spanish [SPA]	5165	
Afrikaans	4752	Georgian	5747	Maltese	5966	Sundanese	6567	
Albanian	6563	German [GER]	5051	Maori	5955	Swahili	6569	
Amharic	4759	Greek [GRE]	5158	Marathi	5964	Swedish [SWE]	6568	
Arabic	4764	Greenlandic	5758	Moldavian	5961	T		
Armenian	5471	Guarani	5360	Mongolian	5960		Tagalog	6658
Assamese	4765	Gujarati	5367	Nauru	6047		Tajik	6653
Aymara	4771	Hausa	5447	Nepali	6051		Tamil	6647
Azerbaijani	4772	Hebrew	5569	Norwegian [NOR]	6061	Tatar	6666	
Bashkir	4847	Hindi	5455	O-R		Telugu	6651	
Basque	5167	Hungarian [HUN]	5467		Occitan	6149	Thai	6654
Bengali;Bangla	4860	I-K			Oriya	6164	Tibetan	4861
Bhutani	5072		Icelandic [ICE]	5565	Oromo(Afan)	6159	Tigrinya	6655
Bihari	4854		Indonesian	5560	Panjabi	6247	Tonga	6661
Bislama	4855	Interlingua	5547	Pashto;Pushto	6265	Tsonga	6665	
Breton	4864	Interlingue	5551	Persian	5247	Turkish [TUR]	6664	
Bulgarian	4853	Inupiak	5557	Polish	6258	Turkmen	6657	
Burmese	5971	Irish [IRI]	5347	Portuguese [POR]	6266	Twì	6669	
Byelorussian	4851	Italian [ITA]	5566	Quechua	6367	U-Z		
C-E		Japanese [JPN]	5647	Rhaeto-Romance	6459		Ukrainian	6757
		Javanese	5669	Romanian [RUM]	6461		Urdu	6764
		Kannada	5760	Russian [RUS]	6467		Uzbek	6772
		Kashmiri	5765	S		Vietnamese	6855	
Catalan	4947	Kazakh	5757		Samoan	6559	Volapuk	6861
Chinese [CHI]	7254	Kinyarwanda	6469		Sangho	6553	Welsh	4971
Corsican	4961	Kirghiz	5771		Sanskrit	6547	Wolof	6961
Croatian	5464	Kirundi	6460	Scots Gaelic	5350	Xhosa	7054	
Czech	4965	Korean [KOR]	5761	Serbian	6564	Yiddish	5655	
Danish [DAN]	5047	Kurdish	5767	Serbo-Croatian	6554	Yoruba	7161	
Dutch [DUT]	6058	L-N		Sesotho	6566	Zulu	7267	
English [ENG]	5160		Laothian	5861	Setswana	6660		
Esperanto	5161		Latin	5847	Shona	6560		
Estonian	5166		Latvian;Lettish	5868	Sindhi	6550		
F-H		Lingala	5860	Singhalese	6555			
	Faroese	5261	Lithuanian	5866	Siswat	6565		
	Fiji	5256	Macedonian	5957	Slovak	6557		
	Finnish [FIN]	5255	Malagasy	5953	Slovenian	6558		
French [FRE]	5264							

If you choose a Language that has a 3-letter abbreviation, the abbreviation will be displayed every time you change the Audio or Subtitle language setting on page 20. If you choose any other languages, '---' will be displayed instead. (3-letter abbreviations are written in brackets.)

Troubleshooting Guide

WARNING: Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair.

Problem	Solution
No power	<ul style="list-style-type: none"> Check if the AC power cord is properly connected.
No picture	<ul style="list-style-type: none"> Check if the TV is switched on. Check the video connection.
Distorted picture	<ul style="list-style-type: none"> Sometimes a small amount of picture distortion may appear. This is not a malfunction.
Completely distorted picture or black/white picture with DVD	<ul style="list-style-type: none"> Connect this unit directly to the TV. Make sure the disc is compatible with this unit.
No sound or distorted sound	<ul style="list-style-type: none"> Adjust the volume. Check that the speakers are connected correctly. ANALOG AUDIO OUT and Euro AV (scart) jack of this unit are not available on the DTS audio.
No audio at digital output	<ul style="list-style-type: none"> Check the digital connections. Check if the audio format of the selected audio language matches your receiver capabilities.
No sound and picture	<ul style="list-style-type: none"> Check that the VIDEO/AUDIO cable is connected to the correct device (refer to pages 7 and 8).
Picture freezes momentarily during playback.	<ul style="list-style-type: none"> Check the disc for fingerprints/scratches and clean with a soft cloth wiping from center to edge.
Disc cannot be played.	<ul style="list-style-type: none"> Ensure the disc label is facing up. Check if the disc is defective by trying another disc. Handle a disc with special care so that it does not have fingerprints, scratches, or dusts on its surface.
No return to start-up screen when disc is removed.	<ul style="list-style-type: none"> Reset the unit by turning it off and on again.
This unit does not respond to the remote control.	<ul style="list-style-type: none"> Aim the remote control directly at the sensor on the front panel. Reduce the distance to this unit. Replace the batteries in the remote control. Re-insert the batteries with their polarities (+/- signs) as indicated.
Buttons do not work or this unit stops responding.	<ul style="list-style-type: none"> To completely reset this unit, unplug the AC power cord from the AC outlet for 5-10 seconds.
This unit does not respond to some operating commands during playback.	<ul style="list-style-type: none"> Operations may not be permitted by the disc. Refer to the instructions of the disc.
This unit cannot read CDs/DVDs.	<ul style="list-style-type: none"> Use a commonly available cleaning CD/DVD to clean the lens before sending this unit for repair.
This unit switches from DVD mode to VCR mode automatically.	<ul style="list-style-type: none"> This occurs 35 minutes after no DVD operation is in progress. This is not a malfunction.
The VCR does not record a TV programme.	<ul style="list-style-type: none"> Make sure the tape has a erase-prevention tab. Make sure this unit is in VCR mode.
The VCR does not perform a timer recording.	<ul style="list-style-type: none"> Make sure the start and the stop recording times are set correctly. Make sure the tape has a erase-prevention tab. Make sure the clock is set. This unit may not perform or continue a timer recording if the power fails for more than 30 seconds.
The motor (cylinder) rotates even when tape playback is stopped.	<ul style="list-style-type: none"> To enable quick play mechanism, the cylinder will rotate for about 5 minutes. This is normal.
You cannot insert a tape.	<ul style="list-style-type: none"> Insert a tape with window side up and the erase-prevention tab facing you. Gently push the center of the tape when putting into the cassette compartment.
You cannot remove a tape.	<ul style="list-style-type: none"> Make sure the power plug is completely connected to a power outlet.

• Some functions are prohibited on some discs.

If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

Specifications

PRODUCT TYPE

DVD Player with Video Cassette Recorder

DISCS

DVD video

Audio CD

Video CD

CD-R

CD-RW

Video Cassette tape

OUTPUT SIGNAL FORMAT

PAL/SECAM colour

FREQUENCY RESPONSE

DVD (linear sound) : 20 Hz to 22 kHz (sample rate: 48 kHz)

20 Hz to 44 kHz (sample rate: 96 kHz)

CD : 20 Hz to 20 kHz (JEITA)

SIGNAL-TO-NOISE RATIO (S/N RATIO)

CD : 70 dB (JEITA)

DYNAMIC RANGE

DVD (linear sound) : 70 dB

CD : 70 dB (JEITA)

TOTAL DISTORTION FACTOR

DVD : 0.1%

CD : 0.1% (JEITA)

WOW AND FLUTTER

Below the measurement limitation (+/- 0.001% W PEAK)
(JEITA)

CONNECTIONS

Front Panel:

Video input

Audio input

Rear Panel:

AERIAL

RF OUT

AUDIO/VIDEO

S-Video output

Analog audio output

Coaxial digital audio output

Optical digital audio output

POWER SOURCE

220-240 V ~ +/- 10%, 50 Hz +/- 0.5%

POWER CONSUMPTION

30 W (standby: 5 W)

OPERATING TEMPERATURE

5°C to 40°C

DIMENSIONS

W 435mm

H 94mm

D 233mm

WEIGHT

Approx. 3.2kg

- Designs and specifications are subject to change without notice.

RCA connector x 1

RCA connector x 1

Coaxial type, female

Coaxial type, male

21 pin scart jack x 2

Mini DIN 4-pin jack
(75 ohm)

Two RCA connectors
(one left channel, one right
channel)

2 Vrms (100 kilo-ohm)

One pin jack, 500mVpp
(75 ohm)

Optical connector

Maintenance

Cleaning the Cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Cleaning Discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out. Do not wipe in a circular motion.
- Do not use solvents such as benzine, thinner, commercially available cleaners, or antistatic spray intended for analogue records.

Cleaning the disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good playback quality, clean the disc lens with CD Lens Cleaner or any commercially available cleaner. Follow the instructions supplied with the cleaner.

Auto Head Cleaning

- This feature automatically cleans the heads as you insert or remove a cassette to ensure a clear picture.
- The playback picture may become blurred or interrupted even if the TV programme received is clear. This does not mean that the recorded programme has been erased. This problem is caused by dirt accumulated on the head after long periods of use, or usage of rental or old tapes. In this case, head cleaning requires highly technical expertise and the nearest dealer should therefore be consulted. Clean heads only when problems occur.

Service

- Should your DVD/VCR become inoperative, do not try to correct the problem by yourself. There are no user-serviceable parts inside. Turn the unit off, unplug the power cord, and take the unit to a Service Centre for servicing.

PAL/MESECAM

- This unit can be played as MESECAM system when in MESECAM position. (See "Playback" section.)
- Playback a tape recorded with SECAM broadcasts in Middle East areas are possible on this unit.
- When a recorded tape with a SECAM-VHS appliance or a SECAM recorded tape is replayed with this appliance, black and white pictures are produced.
- This appliance cannot be used in France: a SECAM system appliance must be used instead.

Make your contribution to the environment

- Spent batteries do not belong in the dustbin.
- You can dispose of them at a collection point for spent batteries or special waste.

Contact your council for details.



Declaration of Conformity

This product complies with the requirement of the directives
EMC-Directive: 89 / 336 / EEC
Low Voltage Directive: 73 / 23 / EEC
CE Marking: 93 / 68 / EEC



We declare that the following product:
DVD/VCR, Model DDVR-5505V
Trade Name: Funai
is in compliance with following Regulations.

EN 55013: 2001, EN55020: 2002,
EN61000-3-2: 2000, EN61000-3-3: 1995 + A1: 2001
EN60065: 1998
EN60825-1: 1994 + A1: 1996 + A2: 2001